




# IMPORTANT

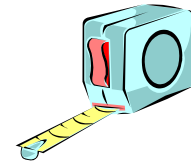


Templates must be printed without size modifications and verified for dimensional accuracy.

- Before printing, select the printing options necessary to ensure that copies are produced without size adjustments.
- After printing, measure the dimensions indicated on the template to ensure correct scale.



# Mount Battery Box Above Exit Trim Device

**HOLES "A" & "AA"**  
Locate Holes "A" and "AA" on the templates at right. These holes are **only** for use when mounting the battery box **above** the exit device. Drill a 3/4" hole for the wire. Preferably to be used with hollow doors but a hole can be drilled into a solid door from "A" to "AA" using a long drill bit. These holes are **NOT** simple thru-holes!

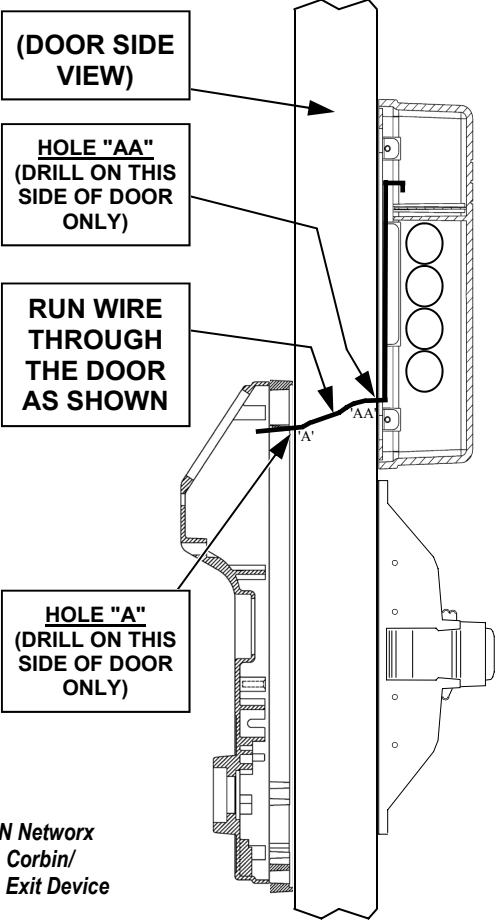


This template is from the ET-PDLN Networx Trilogy® Panic Exit Device Trim Corbin/Russwin Model ED5000 Series Rim Exit Device

(Use this template on this side of the door)

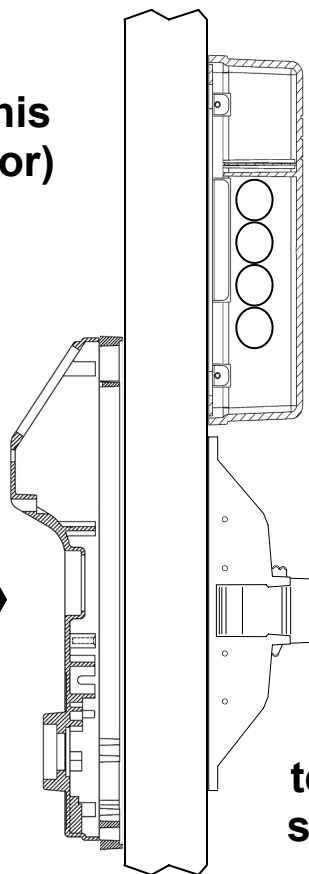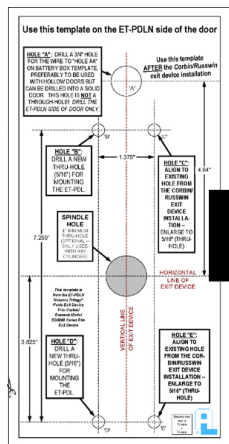

(Use this template on this side of the door)

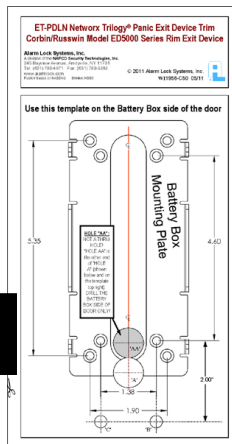


## ET-PDLN Networx Trilogy® Panic Exit Device Trim Corbin/Russwin Model ED5000 Series Rim Exit Device

Alarm Lock Systems, Inc.  
A division of the NAPCO Security Technologies, Inc.  
345 Bayview Avenue, Amityville, NY 11701  
Tel: (631) 789-4871 Fax: (631) 789-3383  
www.alarmlock.com  
Publicly traded on NASDAQ Symbol: NSSC

© 2011 Alarm Lock Systems, Inc.  
WI1956-C50 05/11



### Use this template on the Battery Box side of the door

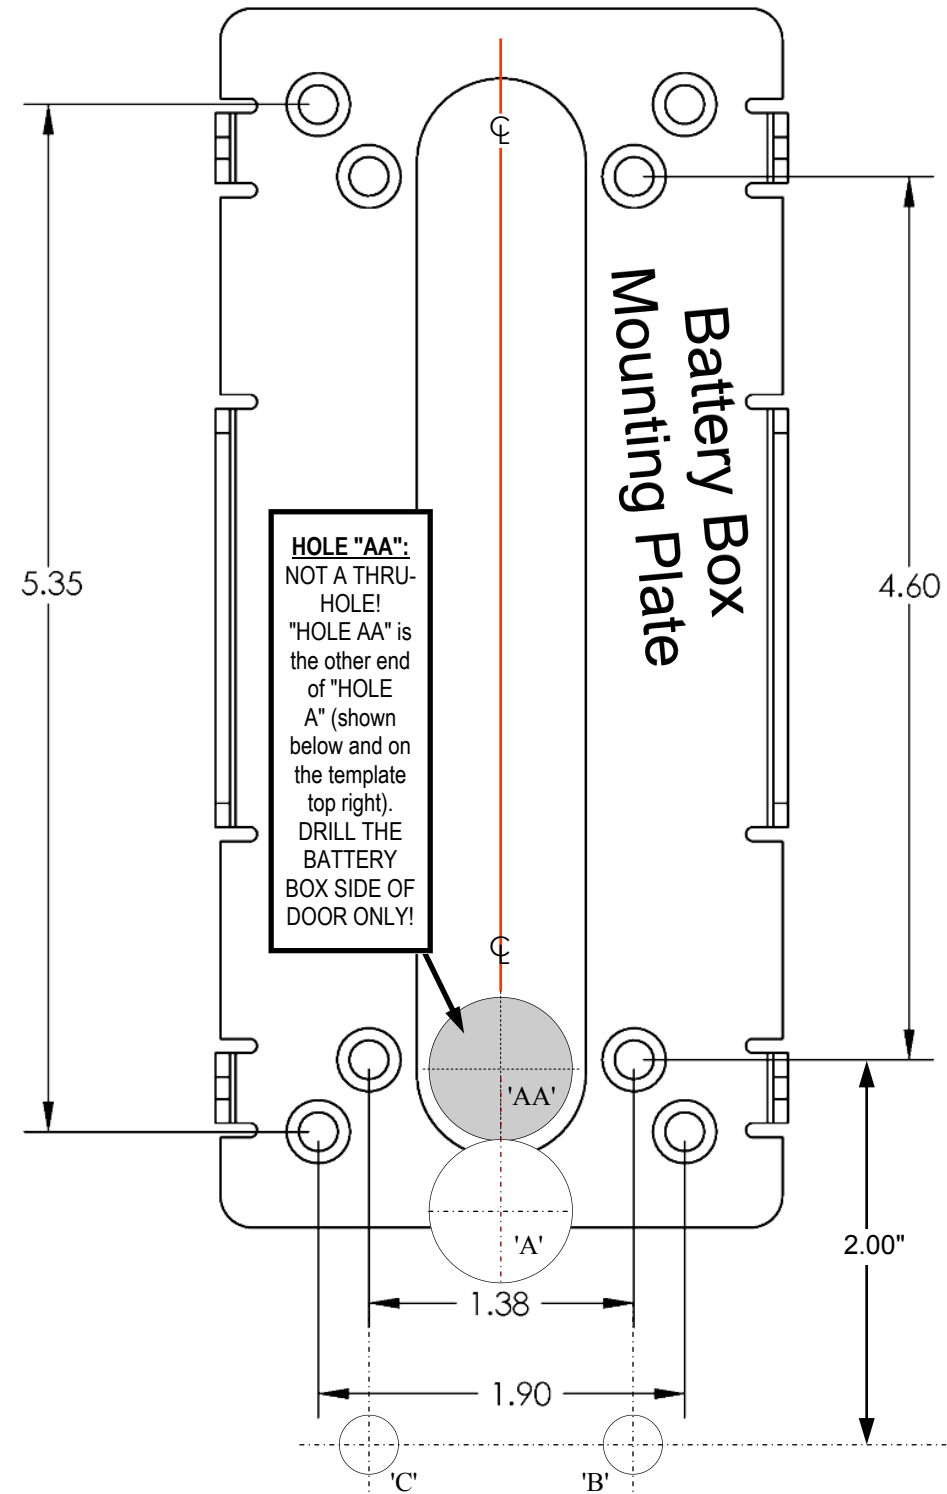

### Use this template on the ET-PDLN side of the door

