




IMPORTANT

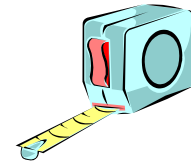

Templates must be printed without size modifications and verified for dimensional accuracy.


- Before printing, select the printing options necessary to ensure that copies are produced without size adjustments.
- After printing, measure the dimensions indicated on the template to ensure correct scale.

Mount Battery Box
Above Exit Trim
Device

HOLES "A" & "AA"
Locate Holes "A" and "AA" on the templates at right. These holes are **only** for use when mounting the battery box **above** the exit device. Drill a 3/4" hole for the wire. Preferably to be used with hollow doors but a hole can be drilled into a solid door from "A" to "AA" using a long drill bit. These holes are **NOT** simple thru-holes!



This template is from the ET-PDLN Networx Trilogy® Panic Exit Device Trim Yale Model 7100 Series Rim Exit Device

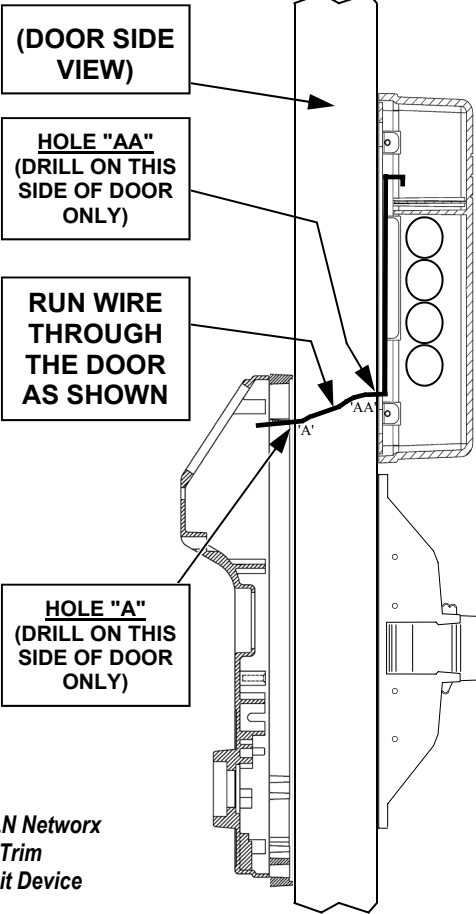


ET-PDLN Networx Trilogy® Panic Exit Device Trim
Yale Model 7100 Series Rim Exit Device

Alarm Lock Systems, Inc.
A division of the NAPCO Security Technologies, Inc.
345 Bayview Avenue, Amityville, NY 11701
Tel: (631) 789-4871 Fax: (631) 789-3383
www.alarmlock.com
Publicly traded on NASDAQ Symbol: NSSC


© 2011 Alarm Lock Systems, Inc.
WI1956-Y71 05/11



Use this template on the Battery Box side of the door

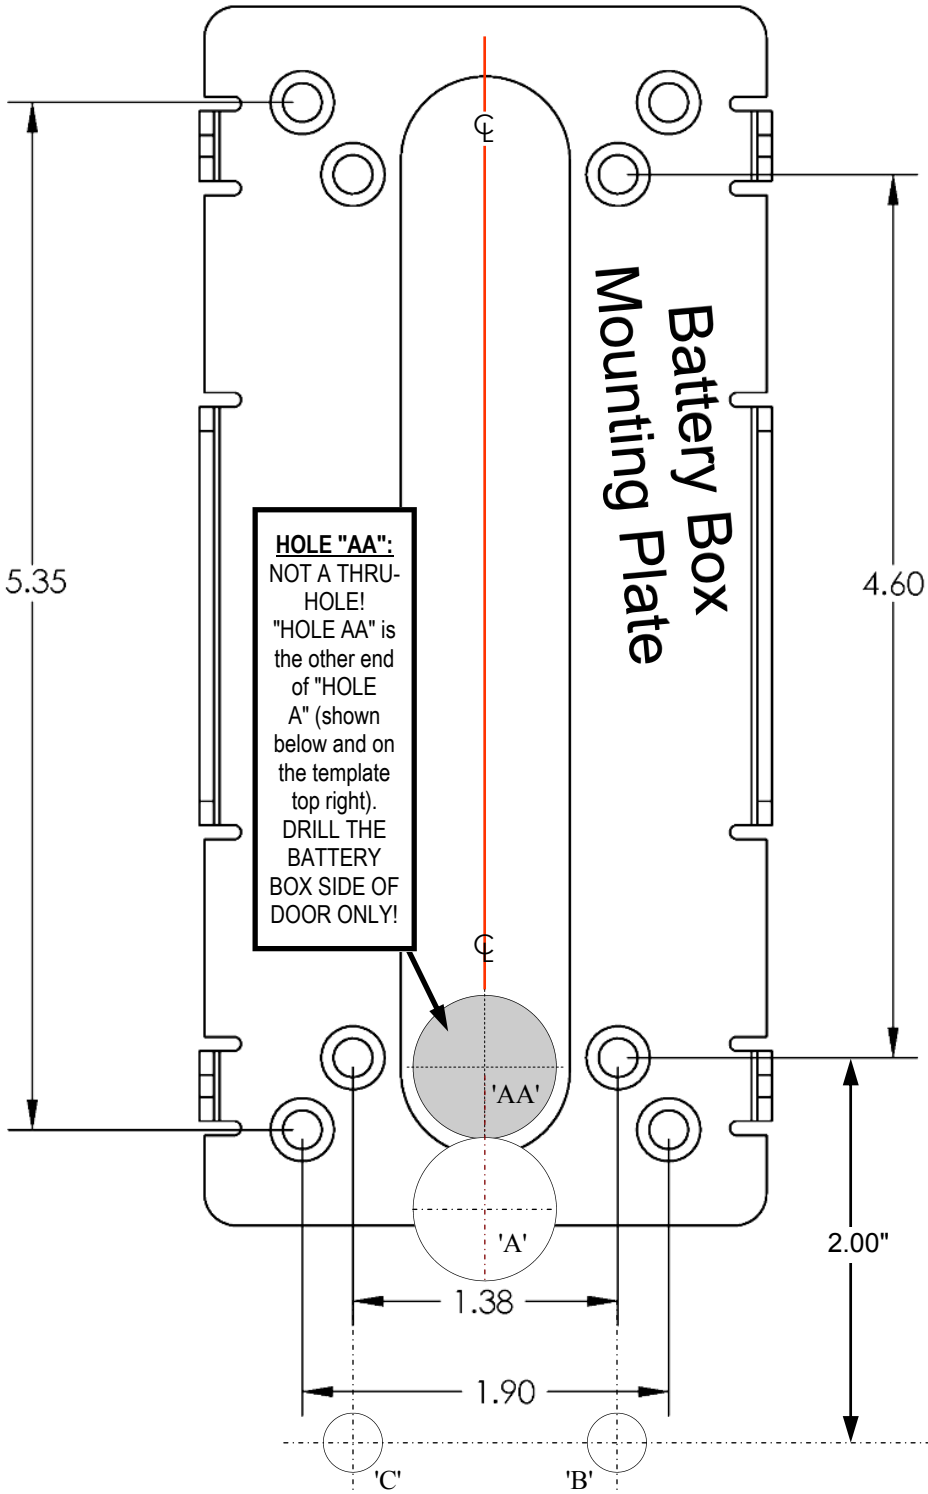

(Use this template on this side of the door)

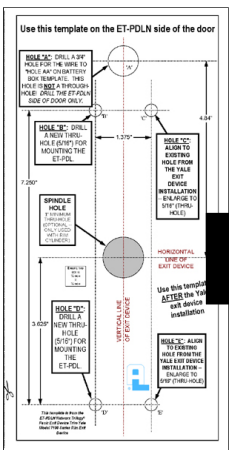

(Use this template on this side of the door)

Use this template on the ET-PDLN side of the door

